



VULCANIC S.A. - 48, rue Louis Ampère
Zone Industrielle des Chanoux - F 93330 NEUILLY / MARNE (France)
Tél. (33) 01.49.44.49.20 - Fax (33) 01.49.44.49.41



INSTALLATION INSTRUCTIONS I.R. HEATERS WITH
A METAL EMITTER P/N 6014-04/05/06.

1) BEFORE INSTALLATION :

- . Make sure that the power source is sufficient for your infrared installation.
- . Check if the voltage corresponds to that indicated on the rating plate.

2) INSTALLATION :

- . Fix the two mounting clips by using 4 M4 screws (Fig.1A).
- . Fix the two right-angle brackets at the choosen place on the incombustible support plate and use appropriated screws (not supplied).
- . Fix the heater at the choosen position with 2 M6 screws (Fig.1B).
- . If vertically mounted, install the heater with the connexion box at the bottom.

3) ELECTRICAL CONNEXION :

- . In the first place, switch off the wiring.
- . The heater is fitted with a male socked and supplied with a plug which has to be connected to the alimentation wire as shown on Fig.2.
- . The earth wire must IMPERATIVELY be connected to the corresponding terminal.
- . Avoid direct radiation or contact of the heater with the alimentation wire.

4) DISASSEMBLING - REPLACEMENT OF THE HEATING ELEMENT :

- . In the first place, switch off the wiring.
- . Remove the fixing units C and D (Fig.1). Caution ! The internal connexion wires are still connecting the two parts of the heater.
- . Remove the FASTON terminals from the ends of the heating element (Fig.1F).
- . Unfix the heating element and pull it out (Fig.1E).

5) PRECAUTIONS FOR USE :

- . Do not radiate an energy of more than 400W/m² of ground surface.
- . This heater is not suitable for exterior use.
- . Place the heater at a minimum distance of 2 m of the occupied areas (within the emission axis) and at a distance of at least 50 cm of all other walls than the support plate.
- . According to the norm EN 60.335-2-30, this device as been designed for a mounting at high level, it has to be installed at a height of at least 180 cm of the floor.
- . Install the material following the prevailing regulations.
- . Avoid radiation to flammable products or products under pressure and to not use in an explosible area.

6) GUARANTY :

- . This device is guaranteed 6 months according to our general sales conditions. The guaranty only includes the replacement of the device sent to our factories with a written letter explaining the defect and recognized defective by our cheking units.

*NOTA : PENSER A JOINDRE UNE COPIE DU FOLIO 2/2 (DOCUMENT RANGE DANS LES CLASSEURS DE NOTICES). (NE PAS IMPRIMER CETTE PARTIE)