



VULCANIC S.A. - 48, rue Louis Ampère  
Zone Industrielle des Chanoux - F 93330 NEUILLY / MARNE (France)  
Tél. (33) 01.49.44.49.20 - Fax (33) 01.49.44.49.41



## **OWNER'S MANUAL**

### **VAPOUR TENSION THERMOSTAT**

#### **REFERENCES 9030 - 51/52/53/54**

#### **1 - APPLICATION :**

Regulation or limitation of temperature for liquids, gases or solids.

#### **2 - DESCRIPTION :**

- Vapour tension thermostat with bulb and capillary made of stainless steel.
- One reverser contact, unpowered.
- Cutting capacity : 16 Amps under 250 V AC.
- Connection by means of 6.35 Faston terminals.
- Uncased models to be mounted on front panel or on mounting (inside a casing or cabinet, for example).

REFERENCE	Range (°C)	Accuracy (°C)	Differential (°C)	Bulb Ø (mm)	Bulb length (mm)	Capillary length (mm)
9030 - 51	-30 +30	± 4	4	6	130	1000
9030 - 52	0 +120	± 5	4	5	110	1000
9030 - 53	0 +200	± 5	10	3	90	1000
9030 - 54	50 +320	± 15	10	3	160	1000

#### **3 - PRECAUTIONS FOR USE :**


- Handle the capillary with care. It must not be pierced under any circumstances : doing so will irreparably damage the appliance. Always allow a curve radius of at least 5 mm.
- Check that the material of the bulb and capillary is compatible with the product gauged, if they are in direct contact with it.

#### **4 - ELECTRICAL CONNECTION AND MOUNTING :**

##### **4 - 1 - MOUNTING :**


- To gain access to the securing system, you must remove the knob and its facing plate :
  - extract the knob by pulling it off its shaft,
  - remove the two screws securing the facing plate,
  - remove the facing plate. The mounting for securing is then accessible.
- On the mounting that should accommodate this thermostat (front panel or securing lug), drill a hole of 7 mm diameter to provide throughway for the shaft of the knob, and two holes of 5 mm diameter (diametrically opposed) on a circle of 28 mm diameter centred on the hole for the shaft, making sure that the appliance is correctly oriented (refer to the diagram below).
- Insert the shaft of the knob through the hole drilled for the purpose.
- Refit the facing plate serving as a tightening washer on the mounting accommodating the appliance, ensuring that its white index coincides with the Faston terminals to the thermostat casing.
- Insert and screw-in the two securing screws.
- Refit the knob on its shaft.

- Fit the bulb, generally in a probe sheath (case of liquids and gas) or in a cylindrical housing (case of solids), of a diameter slightly larger than that of the bulb, in order to ensure satisfactory heat conduction. You are recommended to ensure this conduction using an appropriate heat grease.

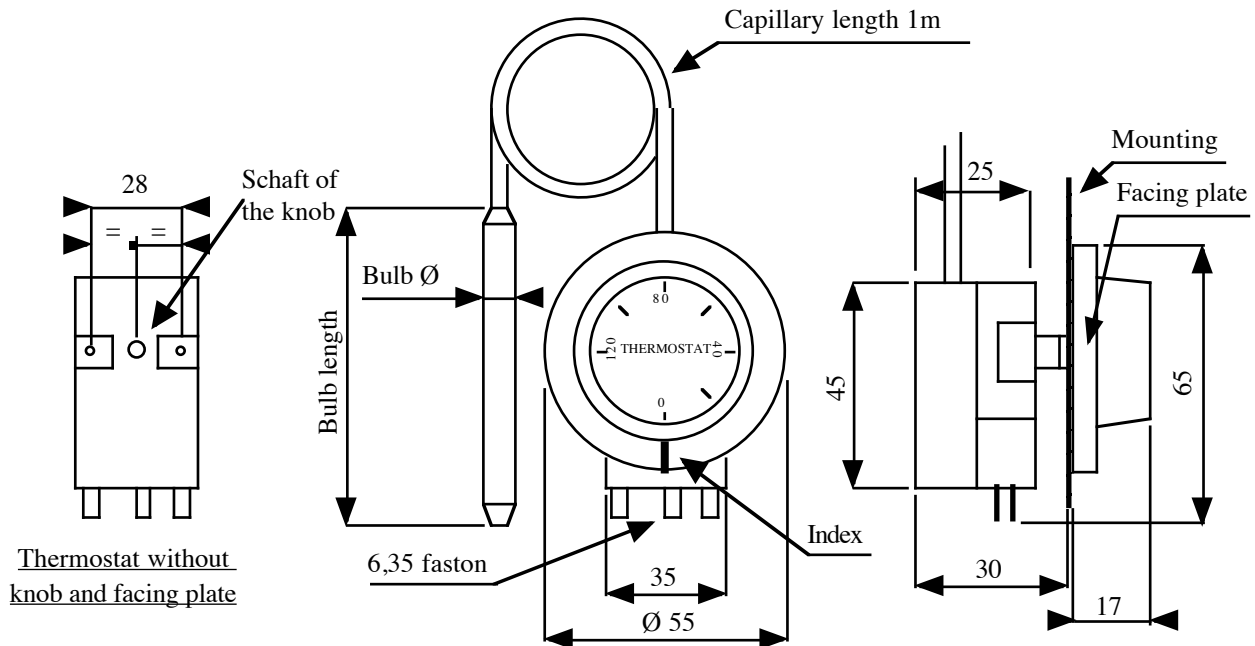

#### 4 - 2 - ELECTRICAL CONNECTION :

Wire according the following schematic :

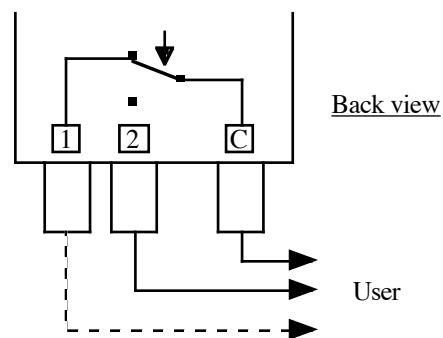

- Make sure you position and tighten each Faston terminal correctly.
- Do not omit to connect the ground terminal to the installation's ground.

#### 5 - START-UP PROCEDURE :

- Using the adjustment knob, position the desired temperature set level opposite the index of the facing plate.
- After checking that all conditions for satisfactory operation of the installation have been complied with, switch the heating installation on.
- Before the nominal temperature is reached, make sure that heating does indeed start-up and stop when you operate the knob of the thermostat. Then reset this knob to the temperature set for use.

NOTE : the information on the dial of the thermostat is not sufficiently precise to be certain of the exactitude of the temperature obtained. Make successive adjustments to the set level until you obtain the desired result, taking measurements with a thermometer.

## **6 - RUNNING MAINTENANCE :**

Perform the following at intervals (at least once per year) :

- Make sure that the Faston terminals (and the screw-type terminals, in the case of cased models) are properly in position and tightened.
- In the case of gauging of a polluting fluid, clean the bulb (and its probe sheath, where applicable) without damaging it, to prevent the possible build-up of a deposit (clogging is likely to render temperature measurement inaccurate, due to obstruction of heat exchange).

## **7 - GUARANTEE :**

The terms of our guarantee comply with the agreements for electrical engineering trades and our general sales conditions.

We will not be liable for damage caused by :

- use at greater than 10% of the nominal voltage for which the equipment was designed,
- exceeding the cut-out capacity of the appliance,
- wear due to inadequate maintenance, impacts, accidents or inexperience of the user,
- non-compliance with the instructions in this documentation, with normal trade practice and with regulations for fire- and explosion-proof appliances,
- effects of corrosion or clogging.